

G-Talk3


Gridmark

GT3-25030


Instruction manual

©Gridmark Ink. All rights reserved.


Thank you for purchasing G-Talk3. To ensure you use the product correctly and safely, please read these instructions carefully before use. Keep these instructions at hand for future reference.

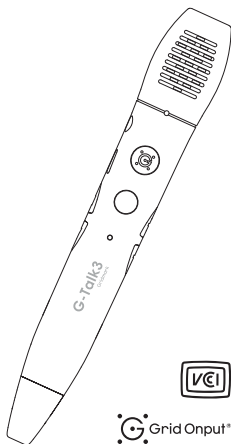

Check the contents

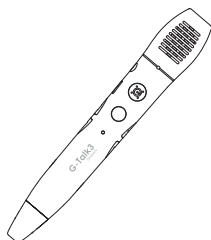

1) G-Talk3 unit: 1

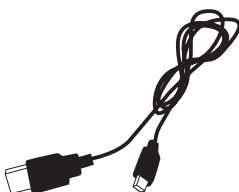

2) USB cable: 1

Please check the contents are in order before you start using the product.
If an item is missing or damaged, please contact the store where you purchased the product.

Safety precautions

These safety precautions should be followed to prevent harm to people or damage to nearby property.

They are categorized to indicate the level of severity of harm or damage that may occur if the product is used incorrectly.



Risk of death or serious injury.



Risk of injury or damage to property.

These symbols categorize and explain the actions required.



DO NOT do this.



You must follow these instructions.

[Precautions for G-Talk3 unit]



- Do not attempt to alter, disassemble, or modify the product. Doing so may cause malfunction, accident, fire, or explosion.
- Do not drop or bump the product or expose it to strong impact(s). There is a risk of fire or explosion.
- Do not use, charge or leave the product near a heat source where the temperature may exceed 60°C (e.g. fire or in a car on a hot day). Doing so may result in the product becoming deformed or overheating, or else cause a fire or explosion.
- Do not allow the product to overheat, for example by throwing it into a fire. There is a risk of fire or explosion.
- Do not immerse the product in water or allow it to get wet. There is a risk of fire or explosion.
- Do not break or damage the outer casing. There is a risk of fire or explosion.




- If you notice any abnormalities such as leakage, discoloration, deformation, damage or strange odors, stop using the product immediately and keep it away from heat sources. There is a risk of fire or explosion.
- If you notice any fluid leaking from the battery, wipe it off immediately. Take care that no fluid gets into your eyes as this could damage your eyesight. If any fluid gets in your eyes, rinse them with clean water but do not rub. Consult a doctor immediately.
- If the battery is not fully charged even after the specified charging time, stop charging. If you continue to charge the battery, there is a risk of fire or explosion.
- Do not break or damage the outer casing. There is a risk of fire or explosion.



- If using the product for the first time after purchasing or if it has not been used for a long time, make sure that it is properly charged before use.

Product specifications

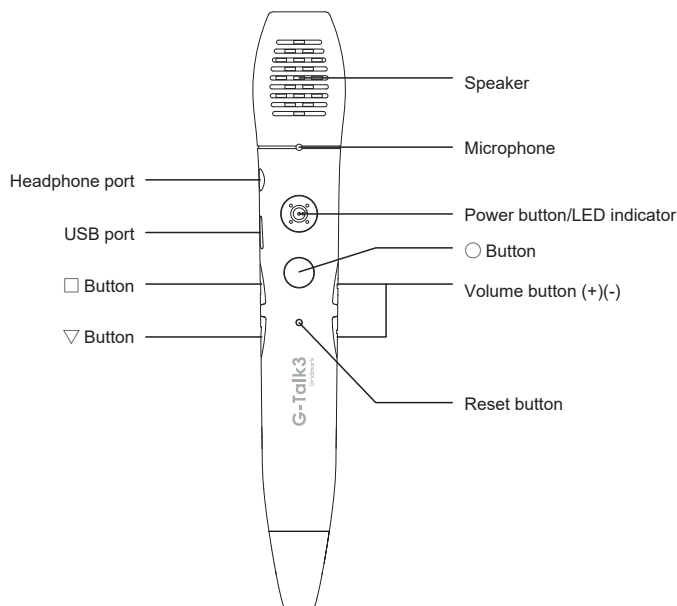

Product name	G -Talk3	Model no.	GT3 -25030
Dimensions	142 × 22 × 19 mm	Weight	Approx. 26 g
Audio output	Stereo 100 mW / 8Ω	Recording microphone	Mono
Continuous playback time	3 hours or more (testing standard)	Charging time	Approx. 3 hours
Rechargeable battery	Lithium-ion battery	Content medium	microSD card (built-in)
External input	Headphones/USB C type	Operating/charging temperature	0-40°C
Storage conditions (humidity)	35-85% RH (no condensation)		
Storage conditions (temperature)	Short term -10-60°C / Long term (up to 3 months) -10-40°C / Long term (up to 1 year) -10-25°C		
LED indicator	Status indicator LED Green/Red/Orange		
Accessories	USB (A -C) cable		

- A dedicated dot code printout and audio data are required to use this product.
- A dot code is a 2D code containing data arranged in extremely small dots.

Operating buttons

Power button	Long press to switch power ON/OFF. *If you leave the power on, the unit will turn off automatically after 5 minutes. However, the power will not turn off automatically if the unit is connected to a USB power source.	
Volume button (+)(-)	(+) Press to increase the volume in steps / Hold for more than 1 second to increase the volume progressively. (-) Press to lower the volume in steps / Hold for more than 1 second to lower the volume progressively. *There are 20 volume steps. The volume is set at the lowest level when the power is turned ON.	
Reset button	In the unlikely event that the unit fails to reset properly, press the reset button with the tip of a ballpoint pen or similar. Power to the unit is switched off.	
○ Button	_____	_____
▽ Button	<In standby mode> Replay the most recent played audio	<During audio playback> Pause playback, press again to resume playback
□ Button	_____	<During audio playback> Stop audio playback

LED indicator

<LED indicator color according to battery level status>

USB cable not connected			USB cable connected (charging)		
Power OFF	_____	Light off	Power OFF	Charging	Blinking orange
Power ON	Full battery	Green light	Power ON	Charging complete	Light off
	Low battery	Orange light		USB drive	Orange light
	Very low battery	Red light			

<LED indicator according to unit status>


Unit	Indicator light	LED color
Power OFF	Light off	N/A
Waiting	Light on	Depending on battery level
Audio playing	Blinking	Depending on battery level
Playback paused	Blinking slowly	Depending on battery level
Recording	Blinking	Red
Recording paused	Blinking slowly	Red

- Make sure the unit is charged properly each time before use.
- G-Talk3 can be used while charging, either via USB adapter or PC.
- Note that malfunction may occur if the LED indicator is red and the battery level is low.
- Avoid storing the unit without use for long periods of time with a fully charged or close to fully charged battery. If the battery is almost fully discharged, it is advisable to charge the unit for 30-60 mins. before storage.
- If left unused for a long period of time, the battery may not be usable even after recharging. If you need to store the unit for a long period of time, charge it every six months when it is almost fully discharged for around 30-60 mins.

How to use G-Talk3 Playing back audio

1. [Turn power ON]


Press and hold the power button for at least 2 seconds. There is a "Power on" tone and the power is switched on.

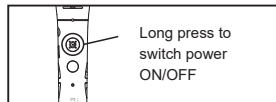

2. [Touch book code]

Touch the book code on the printed dot code you wish to use. The message is reproduced and the audio is ready to be played back.

*You may omit touching the book code subsequently. However, if using a new printed dot code, touch the new book code before use.

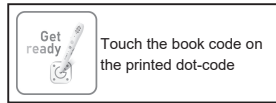


3. [Touch the dot code to play back audio]

Touch the printed dot code compatible with G-Talk3. The audio linked to the dot code is played back.

*The LED indicator blinks green while audio is being played.

*The audio linked to the dot code is played back.

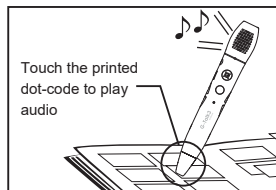


4. [Using operating buttons during audio playback]

For more information on operating buttons related to audio playback, please refer to "Operating buttons" on page 1 of this manual.

5. [Turn power OFF]

Press and hold the power button for at least 2 seconds. There is a "Power off" tone and the power is switched off.

*Points to note for touching printed dot-codes
Keep the pen tip within 30 degrees of upright at all angles. Do not subject the pen tip to force of any kind, for example by pressing down hard or else tapping it sharply.

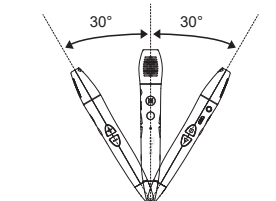

Guarantee and after-sales support

Inquiries

E - mail: support@gridmark-club.com

Distributor: Gridmark-Club

URL: <https://gridmark-club.com>

Guarantee Policy

This Guarantee Policy sets forth the terms and conditions of the repair guarantee for our products after purchase by the customer. It does not set out the customer's statutory rights.

- If the product develops a fault during normal use within the guarantee period, it can be repaired free of charge.
- If the product develops a fault, please fill out the required information on the guarantee card and send it to the store where you purchased it or to Gridmark together with your proof of purchase (receipt, etc.) from the store concerned. Shipping charges are payable by the customer.
- In the following cases, a repair fee may be payable even during the guarantee period.
 1. If the guarantee card or proof of purchase are not presented, or if any required information is omitted or found to be false.
 2. Fault caused by incorrect use, dropping, repair or modification at the customer's own responsibility.
 3. Fault caused by a natural disaster, fire or similar event, or else caused by moisture or foreign objects getting into the unit.
 4. Fault caused by connecting incorrect equipment to the unit.
 5. If the product is acquired through transfer, resale, second-hand sale, auction or other similar means.
- If the main unit or any parts are replaced during repair, the replaced items will remain the property of Gridmark.
- This policy guarantees the repair of the main unit and accessories of this product. Gridmark will not be liable for any direct, indirect, incidental, or consequential damage caused by malfunction or use of this product.


* The guarantee card for this product is included with the product. Please keep the guarantee card together with the proof of purchase (receipt, etc.) from the store where you purchased the product. You will need these if you make a guarantee claim.

Charging

<Connecting to an adapter>

First, turn off the power supply to G-Talk3. Take the USB cable that comes with the unit and connect the USB-A end of the cable to the adapter. Next, connect the USB-C end to the USB port on the side of G-Talk3. The LED indicator will flash orange and charging will start.

*The recommended current for the adapter is 800mAh or more. The battery may not charge properly if an adapter with a current of less than 450mAh is used.

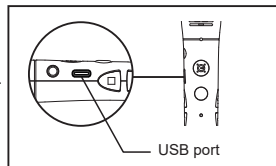

<Connecting to a PC>

First, turn off the power supply to G-Talk3. Take the USB cable that is supplied with the unit and connect the USB-A end of the cable to the PC. Next, connect the USB-C end to the USB port on the side of G-Talk3. The LED indicator lights up green and the mass storage connection is established.

Press and hold the power button for at least 2 seconds to disconnect the mass storage and start charging.

*Do not change or delete data in G-Talk3 when the mass storage connection is established. The unit may not work properly.